



TOP PANEL BOLTED INTO POSITION TO ALLOW FOR REMOVAL OF THE GREEN SLATE PANELS AND GLASS SHOULD THIS BE REQUIRED

RESTRAINING CHANNEL ON THE UNDERSIDE OF THE TOP PANEL, MIRRORING THE ONE ON THE FOUNDATION BLOCK

ASSEMBLY INSTRUCTIONS

POSITION THE FOUNDATION STONE (A) IN THE GROUND.

POSITION AND BOLT PIECES B & C AGAINST THE EDGES OF THE FOUNDATION STONE.


LOCATE THE BOTTOM OF PIECES D & E INTO THE RESTRAINING CHANNEL IN THE TOP OF THE FOUNDATION STONE.

LIFT PIECES D & E INTO POSITION BETWEEN THE NOW VERTICAL POSTS (B & C) AND PLACE PIECE F ON TOP, LOCKING PANELS D & E INTO ITS RESTRAINING CHANNEL. SECURE WITH THE BOLTS. (THESE BOLTS CAN BE REMOVED SHOULD THE GLASS NEED TO BE REMOVED)

ONCE THE MEMORIAL IS IN ITS FINAL POSITION, THEN POUR CONCRETE AROUND THE FOUNDATION STONE UP TO THE DESIRED LEVEL.

ONCE THE CONCRETE HAS DRIED, PLACE PIECES G & H AROUND THE MEMORIAL, WITHIN THE STEEL BAND, ON A FURTHER BED OF SAND & CEMENT.

FALSE JOINT ENGRAVED ONTO THE SUPPORTING POSTS

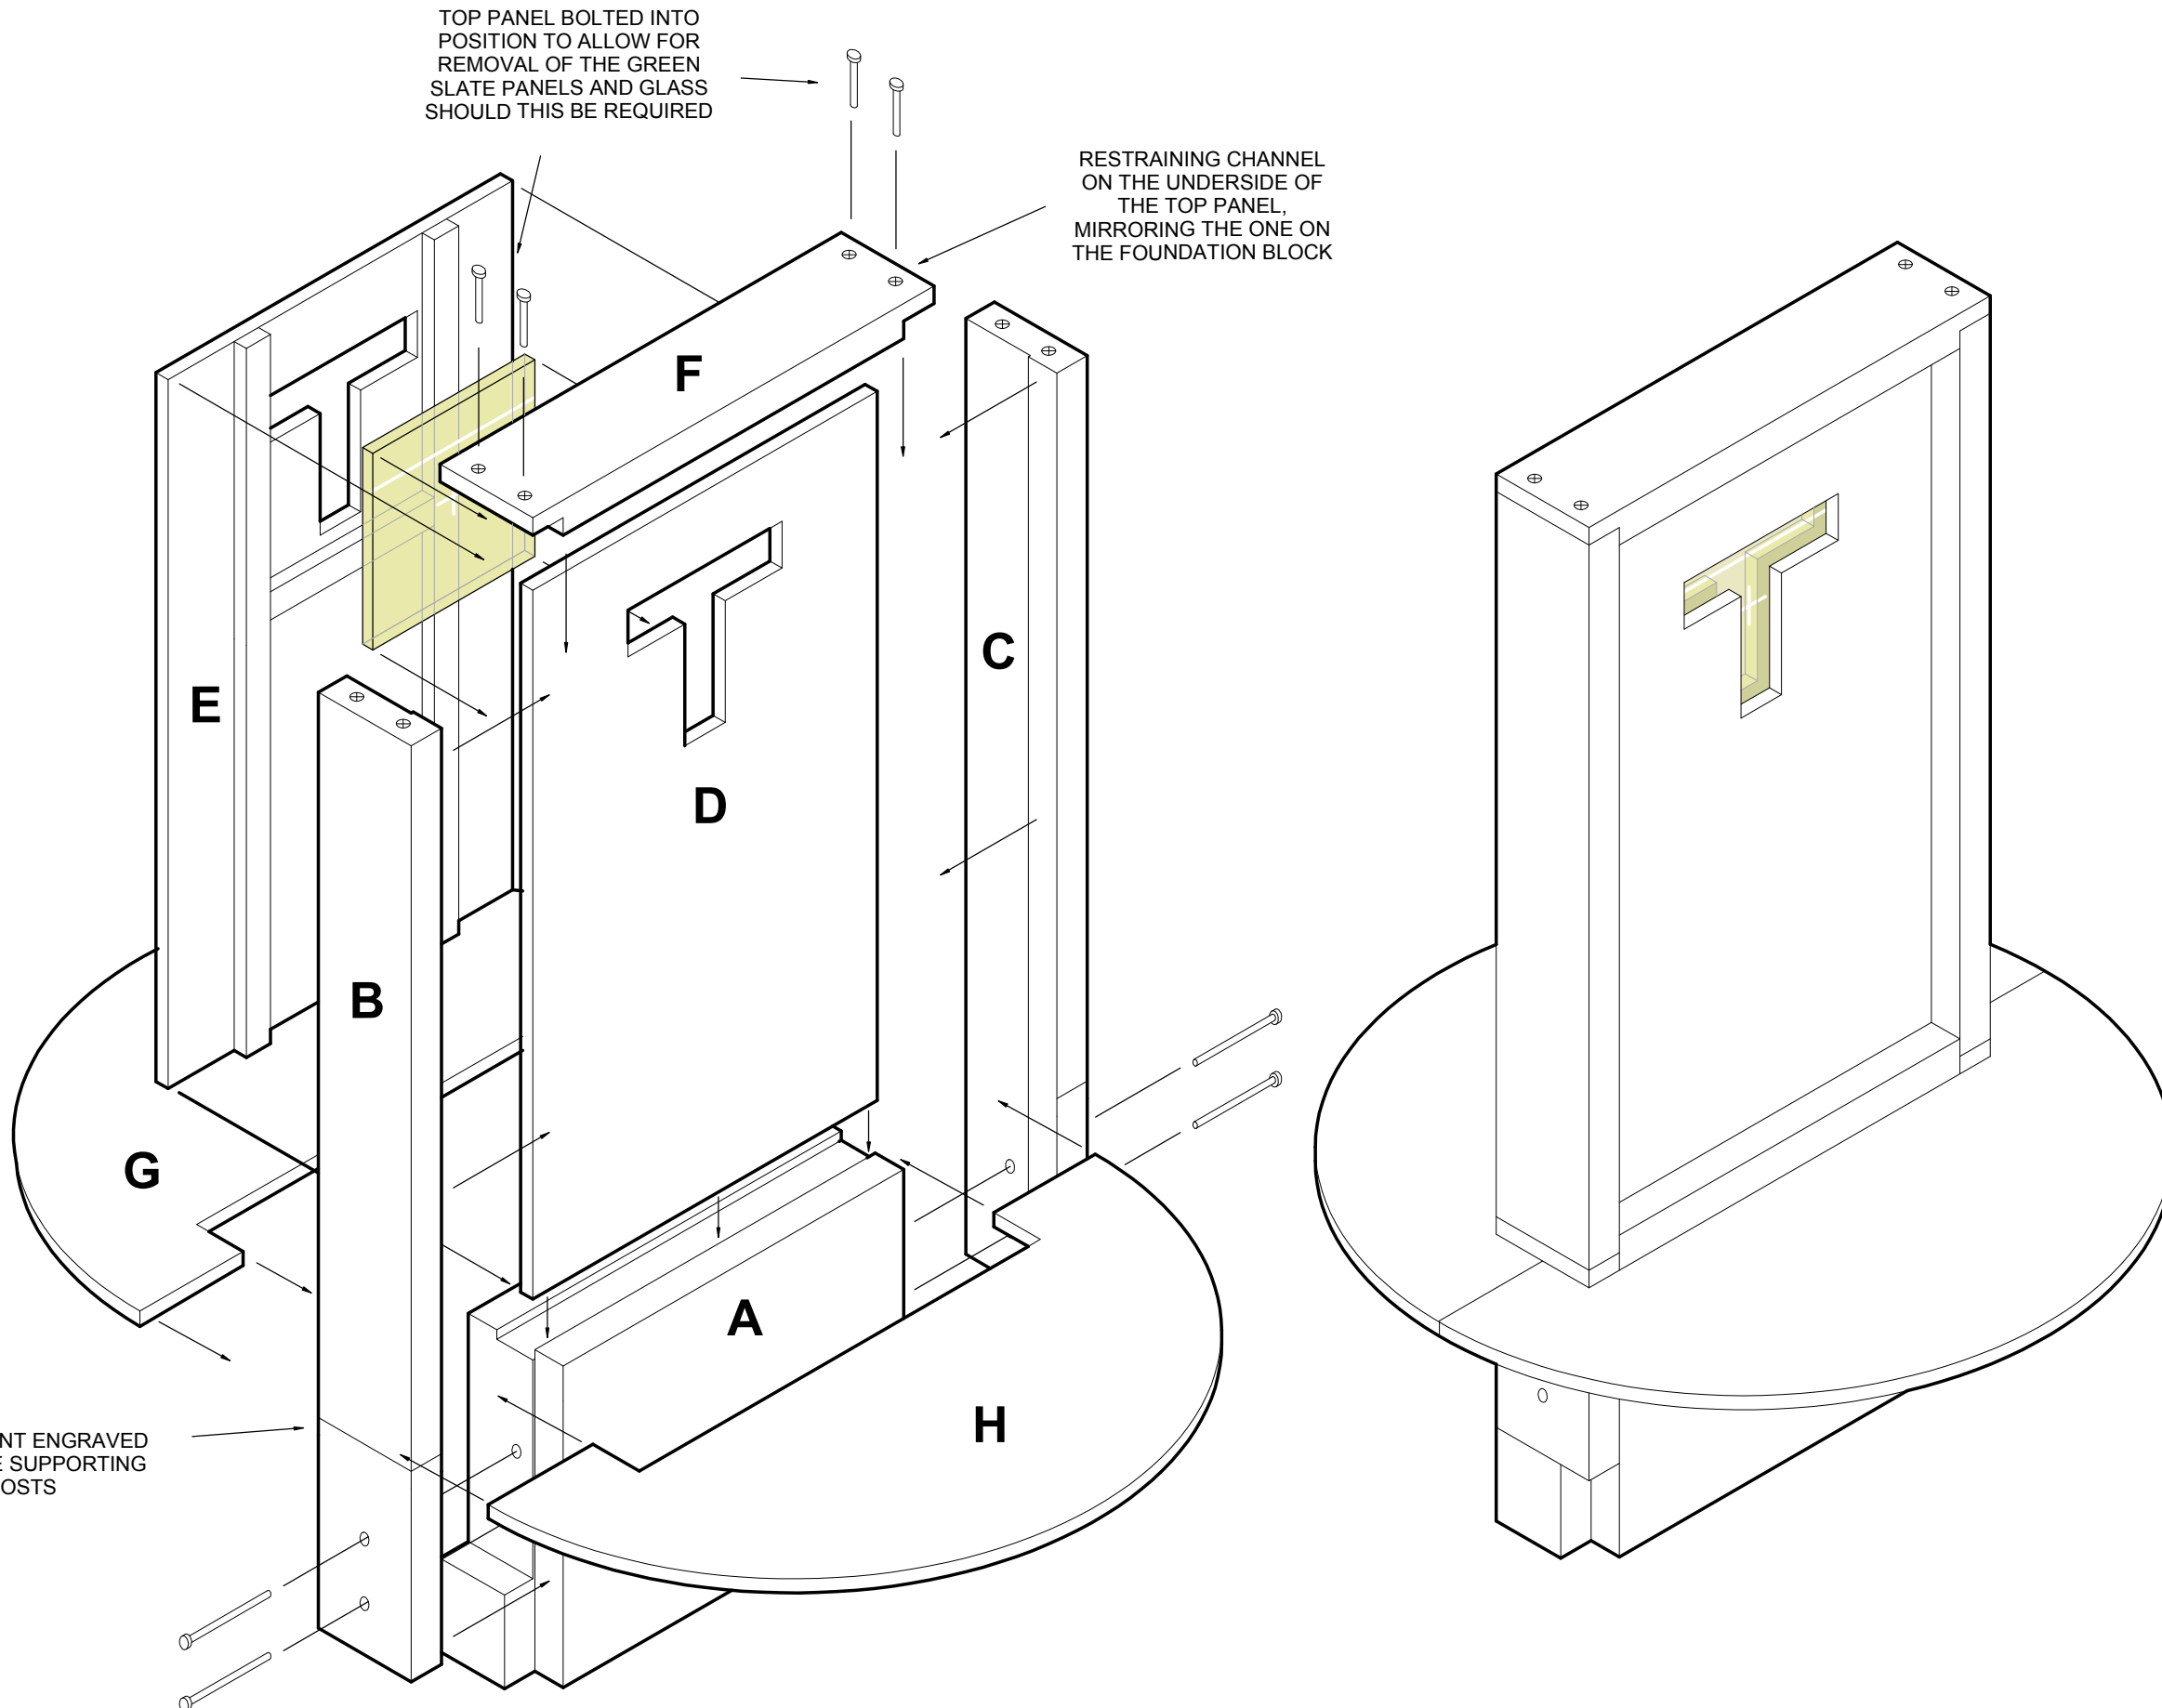

TUNNELLERS MEMORIAL

EXPLODED DIAGRAM

SCALE - 1:15 (A3)

BPK 18/SEP/09
KIRKSTONE QUARRIES Ltd